



# Agilent 1200 Infinity Series Universal Interface Box



**Agilent Technologies**


## Introduction

The Agilent 1200 Infinity Series Universal Interface Box (G1390B) is a multipurpose accessory for the Agilent 1200 Infinity Series that extends instrument communication capability to high quality analog and digital output and input. It provides a general connection interface for existing and upcoming Agilent sensors (e.g. pH-, temperature-, leak- sensors) and other accessory equipment. Peak-based fraction collection with external detectors and mass-based fraction collection with Agilent MS rely on the Universal Interface Box II.

The Agilent 1200 Infinity Series Universal Interface Box (shortly referred to as UIB II) replaces the Agilent 1100 Series Universal Interface Box (G1390A) which is designed for peak-based fraction collection with external 3rd party detectors via analog signal input or mass-based fraction collection with an Agilent MS via digital signal trigger.

### NOTE

The older G1390A is only needed for peak-triggering with legacy Agilent 1100 Series LC-MSD (G1946 C/D) or Fraction Collector Devices without RC.net drivers.

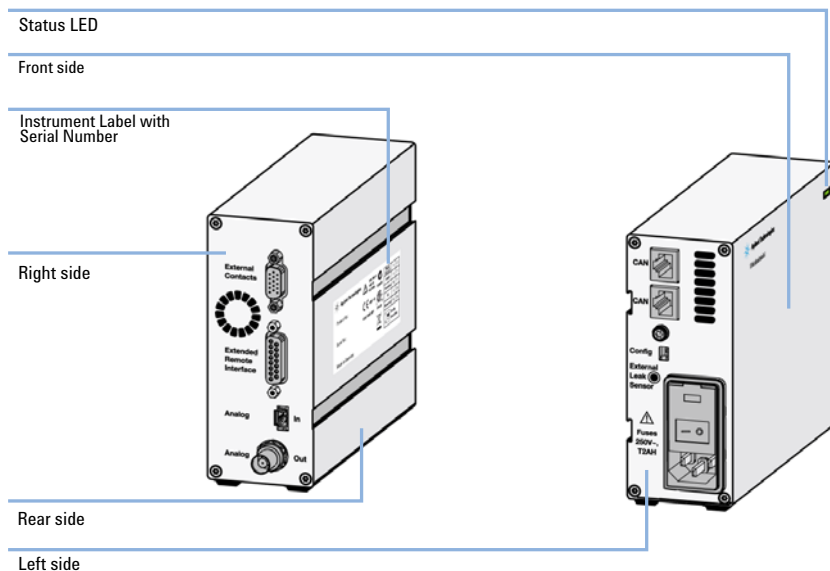

**Figure 1** Overview of Universal Interface Box II (UIB II)

# Features


Feature summary:

- Analog input for data collection from any type of 3rd-party detector such as evaporative light scattering, laser-induced fluorescence, refractive index or radioactivity detectors
- Analog-to-digital conversion of analog input for full data analysis through Agilent chromatography data system, or for peak-based fraction collection triggered by baseline threshold or peak slope (peak width > 0.2 seconds)
- Analog output to feed pump pressure traces or detector signals from Agilent LC modules to third-party data systems
- General purpose input/output interface (GPIO/ERI) for digital mass-based fraction triggering and general purpose use
- Low voltage output of 5 V and/or 24 V
- Four timetable programmable relay contacts for control of external devices through close/open commands
- External leak sensor with separate input line for improved lab safety
- CAN connection to 1200 Series LC or 1200 Infinity Series LC modules

## Deployment

The following sections describe some of the options for connecting a 1200 Infinity Series LC instrument with other modules or devices.

### Additional Analog Out for every Agilent module to provide instrument or chromatography signals to 3rd party receivers

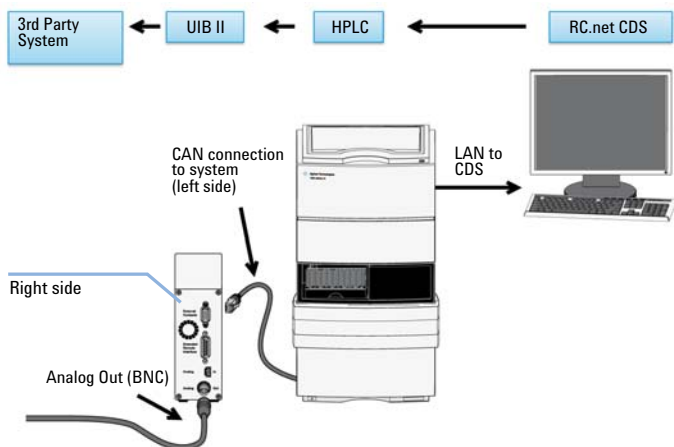


**Figure 2** Connection to provide additional analog out

#### NOTE

Use any of the following cable options depending on input device: #061, #062, #064.

For explanations of the option numbers refer to [Table 2](#) on page 14.

## 3rd party detector signal acquisition

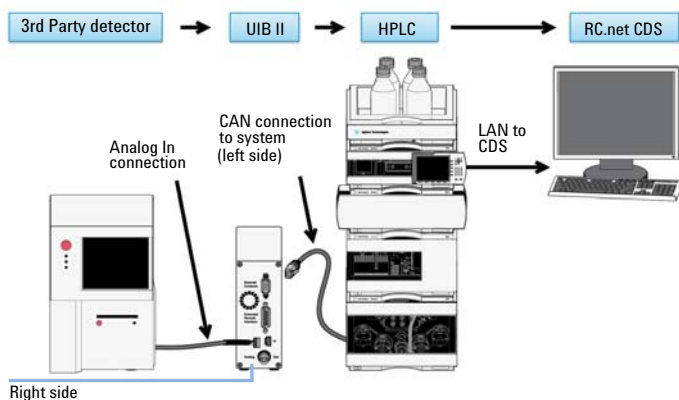


**Figure 3** Connection to 3rd party device

### NOTE

Use any of the following cable options depending on output device:  
#063, #064.

For explanations of the option numbers refer to [Table 2](#) on page 14.

## 3rd party (Peak Detection) triggered fraction collection

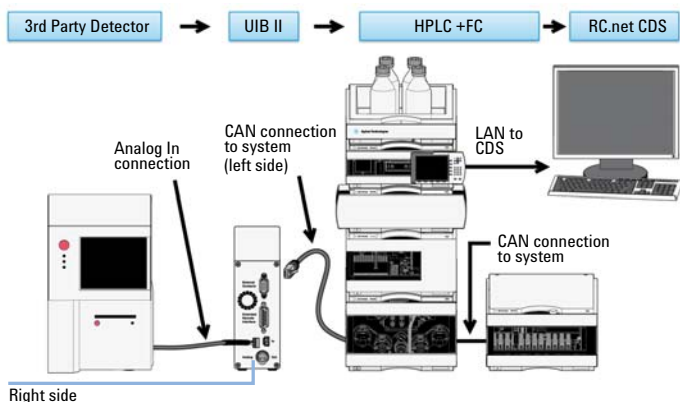


**Figure 4** Connection to 3rd party device for fraction triggering

### NOTE

Use any of the following cable options depending on output device:  
#063, #064.

For explanations of the option numbers refer to [Table 2](#) on page 14.

## Mass-Based fraction collection

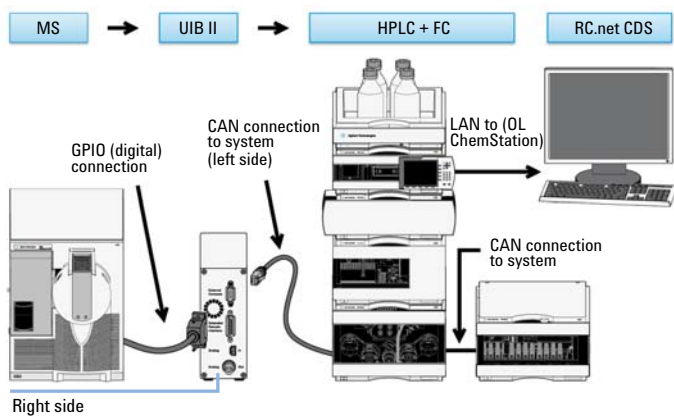


**Figure 5** Connection for mass-based fraction collection

### NOTE

Use following cable option for 61xx MS systems: #066.

For explanations of the option numbers refer to [Table 2](#) on page 14.

# External Contacts Board for time table programmable relay switching allows control of peripheral equipment

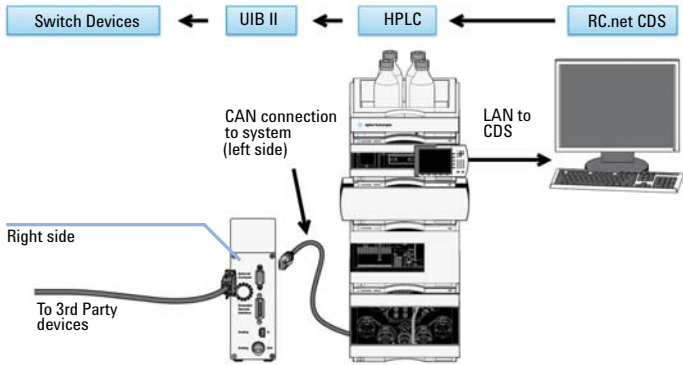

**Figure 6** Connection to use external boards/relay switching functionality

## NOTE


Use following cable option: #065.

For explanations of the option numbers refer to [Table 2](#) on page 14.




# Connectors of the UIB II

## Overview of Connectors

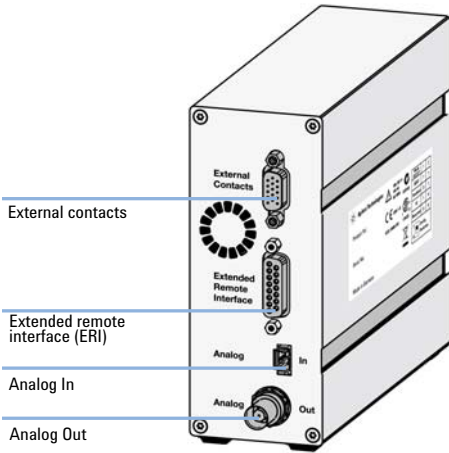


**Figure 7** Right side of the UIB II

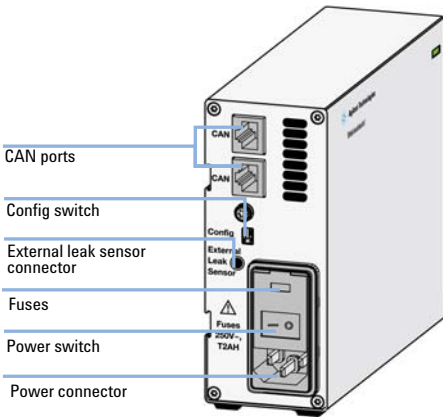

**Figure 8** Left side of the UIB II

# Typical Connection of UIB II to an Agilent LC Stack

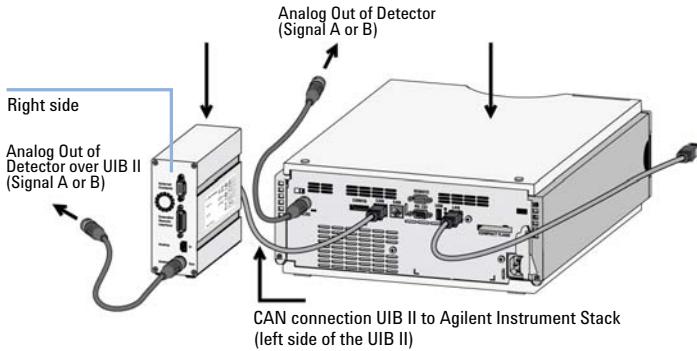

**Figure 9** Connection UIB II to an Agilent LC stack (example)


## Config Switch Settings of the UIB II

Mode SELECT	1	2
BOOT	1	1
Resident	0	1
FC	1	0
Reserved	0	0

1	Config. Switches
0	

**Figure 10** Config Switch

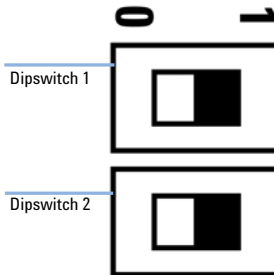

**Figure 11** Dipswitch 1 and 2

**Table 1** Config Switch Settings

Dipswitch 1	Dipswitch 2	Function
ON (1)	ON (1)	Default/Standard Operation Mode
ON (1)	OFF (0)	Forced Cold Start
OFF (0)	ON (1)	Resident Mode
OFF (0)	OFF (0)	Not Supported

## Special Settings

### Boot-Resident

Firmware update procedures may require this mode in case of firmware loading errors (main firmware part). If you use the following switch settings and power the instrument up again, the instrument firmware stays in the resident mode. It is not operable as a module. It only uses basic functions of the operating system for example, for communication. In this mode the main firmware can be loaded (using update utilities).

### Forced Cold Start

A forced cold start can be used to bring the module into a defined mode with default parameter settings.

#### CAUTION

Loss of data

Forced cold start erases all methods and data stored in the non-volatile memory. Exceptions are calibration settings, diagnosis and repair log books which will not be erased.

→ Save your methods and data before executing a forced cold start.

## Connector Descriptions

### Analog Out / Analog In

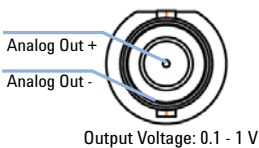


Figure 12 Analog Out


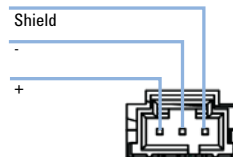


Figure 13 Analog In

## ERI / GPIO

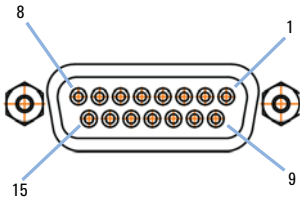


**Figure 14** ERI / GPIO

Pin	Enh. Remote
1	IO 1
2	IO 2
3	IO 3
4	IO 4
5	IO 5
6	IO 6
7	IO 7
8	IO 8
9	1wire DATA
10	DGND
11	+5 V ERI out
12	PGND
13	PGND
14	+24 V ERI out
15	+24 V ERI out

ERI Interface (Enhanced Remote Interface) Description: This interface contains 8 individual programmable input/output pins. In addition it provides 24 V power and 5 V power and a serial data line to detect and recognize further add-ons that could be connected to this interface. This way the interface can support various additional devices like sensors, triggers (in and out) and small controllers, etc.

# Relay / Aux.

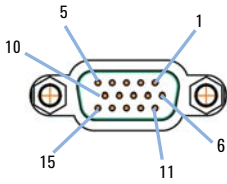





**Figure 15** Relay / Aux.

PIN	Function
1	[Signal line diagram]
2	
3	[Signal line diagram]
4	
6	[Signal line diagram]
5	
9	
8	[Signal line diagram]
7	
10	[Signal line diagram]
11	
12	AUX 1
13	AUX 2
14	A-GND
15	D-GND




# Cables for UIB II

## Cable Overview UIB II

 
**Table 2** UIB II Cable Overview


 
Option number	Cable part number	Description	Usage
#061	8120-8140	 BNC to BNC	For Analog Out to BNC
#062	01046-60105	 BNC to general purpose	For Analog Out
#063	35900-60910	 C-Grid to general purpose	For Analog Input
#064	G1390-60002	 BNC to C-Grid	For Analog Input/Out



**Table 2**    UIB II Cable Overview

<b>Option number</b>	<b>Cable part number</b>	<b>Description</b>	<b>Usage</b>
#065	G1103-61611	 External contacts to general purpose	For External Contacts
#066	G1968-60805	 ERI to MS RJ-45	For Mass-based Fraction Collection
#067	5188-8029	 ERI to general purpose	General Purpose (GPIO/ERI)



# Analog Cables

 p/n 8120-1840	Contact/Lead	Signal Name
	Shield	Analog -
	Center	Analog +

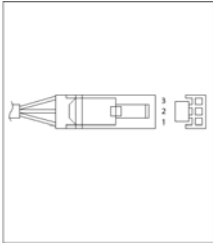
p/n G1390-60002	Contact Lead	Signal Name
	2	Analog -
	3	Analog +
	Shield	Analog -
	Center	Analog +

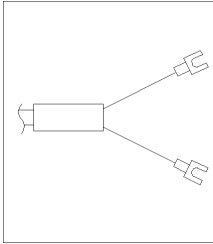p/n 01046-60105	Contact/Lead	Signal Name
	Black	Analog -
	Red	Analog +
	Shield	Analog -
	Center	Analog +

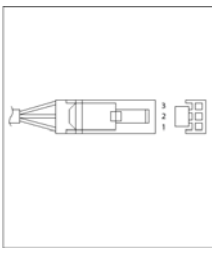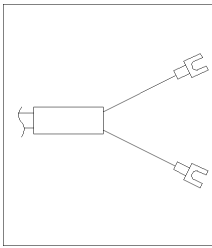

p/n G35900-60910	Contact/Lead	Signal Name
	2	Analog -
	3	Analog +
	Black	Analog -
	Red	Analog +

## External Contact Cable

 

One end of this cable provides a 15-pin plug to be connected to Agilent modules interface board. The other end is for general purpose.

### Agilent Module Interface Board to general purposes

p/n G1103-61611	Color	Pin Agilent module	Signal Name
	White	1	EXT 1
	Brown	2	EXT 1
	Green	3	EXT 2
	Yellow	4	EXT 2
	Grey	5	EXT 3
	Pink	6	EXT 3
	Blue	7	EXT 4
	Red	8	EXT 4
	Black	9	Not connected
	Violet	10	Not connected
	Grey/pink	11	Not connected
	Red/blue	12	Not connected
	White/green	13	Not connected
	Brown/green	14	Not connected
	White/yellow	15	Not connected

## General Purpose Cable


**Table 3** GPIO General Purpose Cable (5188-8029) descriptions

Wire Color	PIN	Enh. Remote
Green	1	IO 1
Violet	2	IO 2
Blue	3	IO 3
Yellow	4	IO 4
Black	5	IO 5
Orange	6	IO 6
Red	7	IO 7
Brown	8	IO 8
Gray	9	1 wire DATA
NC	10	DGND
NC	11	+5 V ERI out
NC	12	PGND
NC	13	PGND
NC	14	+24 V ERI out
White	15	+24 V ERI out

# Representation in the Driver Software

The representation of the UIB II in the dashboard of the Rapid Control LC Driver provides information on the following items:

- Connectors
  - Analog In
  - Analog Out
- Relay contacts
- Voltage out information (if used)

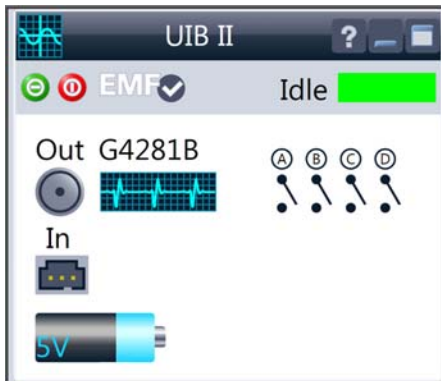

**Figure 16** Dashboard tile of the G1390B driver

**Table 4** Function of items in UIB II graphic

Item	Function
	Shows the source of the Analog Out signal (upper) or Test Signal (lower)
	Shows the current states of the four external contacts
	Shows which Voltage Out voltages are currently enabled.

# Appendix

## Electrical Connections

- The CAN bus is a serial bus with high speed data transfer. The two connectors for the CAN bus are used for internal module data transfer and synchronization.
- The power input socket accepts a line voltage of 100 – 240 VAC  $\pm 10\%$  with a line frequency of 50 or 60 Hz. Maximum power consumption varies by module. There is no voltage selector on your module because the power supply has wide-ranging capability. There are no externally accessible fuses, because automatic electronic fuses are implemented in the power supply.

### NOTE

Never use cables other than the ones supplied by Agilent Technologies to ensure proper functionality and compliance with safety or EMC regulations.

---

## Serial Number Information 1200 Series and 1290 Infinity

The serial number information on the instrument labels provide the following information:

Format	CCIISSSSS
CC	CC country of manufacturing <ul style="list-style-type: none"><li>• DE = Germany</li><li>• JP = Japan</li><li>• CN = China</li></ul>
III	identifier: normally only changed at significant modifications
SSSSS	real serial number

## Physical Specifications

**Table 5** Physical Specifications

Type	Specification	Comments
Weight	0.9 kg (2 lbs)	
Dimensions (height × width × depth)	165 x 135 x 55 mm (6.5 x 5.3 x 2.2 inches)	
Line voltage	100 – 240 VAC, ± 10 %	Wide-ranging capability
Line frequency	50 or 60 Hz, ± 5 %	
Power consumption	140 VA / 65 W	Maximum
Ambient operating temperature	4–55 °C (39–131 °F)	
Ambient non-operating temperature	-40 – 70 °C (-40 – 158 °F)	
Humidity	< 95 % r.h. at 40 °C (104 °F)	Non-condensing
Operating altitude	Up to 2000 m (6562 ft)	
Non-operating altitude	Up to 4600 m (15091 ft)	For storing the module
Safety standards: IEC, CSA, UL	Installation category II, Pollution degree 2	For indoor use only.

# Technical and Performance Specifications

**Table 6** Performance specifications

Type	Comment
High breaking capacity fuse	2.0 A, 250 V
<b>Signal specifications:</b>	
CAN	2-wire serial bus system
Analog-input	Input Range= -1 V to 1 V Resolution = 24 bit A/D-Converter Effective System Resolution = +/- 1 uV (rms)
GPIO	TTL compatible Input and Output Open collector characteristic Input voltage range 0 V to 5 V
Relay outputs	2 contact closure outputs and 2 double throw outputs $I_{max} = 250 \text{ mA}$ $U_{max} = 30 \text{ V DC/AC}$ The contacts are protected by a self-resetting PTC-fuse

## Delivery Checklist

Ensure all parts and materials have been delivered with your module. The delivery checklist is shown below. Please report any missing or damaged parts to your local Agilent Technologies sales and service office.

<b>p/n</b>	<b>Description</b>
G1390-90010	1200 Infinity Series UIB-II User Manual EN
G4800-64500	Agilent 1200 Infinity Series User Documentation DVD
5181-1519	CAN cable, Agilent module to module, 1 m Power cord

## Damaged Packaging

If the delivery packaging shows signs of external damage, please call your Agilent Technologies sales and service office immediately. Inform your service representative that the instrument may have been damaged during shipment.

### CAUTION

"Defective on arrival" problems

If there are signs of damage, please do not attempt to install the module. Inspection by Agilent is required to evaluate if the instrument is in good condition or damaged.

- Notify your Agilent sales and service office about the damage.
  - An Agilent service representative will inspect the instrument at your site and initiate appropriate actions.
-



## Condensation

### CAUTION

Condensation within the module

Condensation will damage the system electronics.

- Do not store, ship or use your module under conditions where temperature fluctuations could cause condensation within the module.
  - If your module was shipped in cold weather, leave it in its box and allow it to warm slowly to room temperature to avoid condensation.
- 

## Bench Space

The module dimensions and weight (see [Table 5](#) on page 22) allow you to place the module on almost any desk or laboratory bench. It needs an additional 2.5 cm (1.0 inches) of space on either side and approximately 8 cm (3.1 inches) at the left side for air circulation and electric connections.

If the bench shall carry a complete HPLC system, make sure that the bench is designed to bear the weight of all modules.

Do not cover ventilation slots of the module.

## Power Cords

Different power cords are offered as options with the module. The female end of all power cords is identical. It plugs into the power-input socket at the left side. The male end of each power cord is different and designed to match the wall socket of a particular country or region.

### **WARNING**

#### **Absence of ground connection or use of unspecified power cord**

**The absence of ground connection or the use of unspecified power cord can lead to electric shock or short circuit.**

- Never operate your instrumentation from a power outlet that has no ground connection.
  - Never use a power cord other than the Agilent Technologies power cord designed for your region.
- 

### **WARNING**

#### **Use of unsupplied cables**

**Using cables not supplied by Agilent Technologies can lead to damage of the electronic components or personal injury.**

- Never use cables other than the ones supplied by Agilent Technologies to ensure proper functionality and compliance with safety or EMC regulations.
- 

### **WARNING**

#### **Unintended use of supplied power cords**

**Using power cords for unintended purposes can lead to personal injury or damage of electronic equipment.**

- Never use the power cords that Agilent Technologies supplies with this instrument for any other equipment.
-

## Power Considerations

The module power supply has wide ranging capability. It accepts any line voltage in the range described in [Table 5](#) on page 22. Consequently there is no voltage selector at the left side of the module. There are also no externally accessible fuses, because automatic electronic fuses are implemented in the power supply.

### WARNING

**Hazard of electrical shock or damage of your instrumentation can result, if the devices are connected to a line voltage higher than specified.**

→ Connect your instrument to the specified line voltage only.

---

### WARNING

**The module is partially energized when switched off, as long as the power cord is plugged in.**

**Repair work at the module can lead to personal injuries, e.g. electrical shock, when the cover is opened and the module is connected to power.**

→ Always unplug the power cable before opening the cover.

→ Do not connect the power cable to the instrument while the covers are removed.

---

### CAUTION

Inaccessible power plug.

In case of emergency it must be possible to disconnect the instrument from the power line at any time.

→ Make sure the power connector of the instrument can be easily reached and unplugged.

→ Provide sufficient space behind the power socket of the instrument to unplug the cable.

---

# The Waste Electrical and Electronic Equipment Directive

## Abstract

The Waste Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC), adopted by EU Commission on 13 February 2003, is introducing producer responsibility on all electric and electronic appliances starting with 13 August 2005.

### NOTE

This product complies with the WEEE Directive (2002/96/EC) marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste.

Product Category:

With reference to the equipment types in the WEEE Directive Annex I, this product is classed as a Monitoring and Control Instrumentation product.

---



### NOTE






Do not dispose off in domestic household waste

To return unwanted products, contact your local Agilent office, or see [www.agilent.com](http://www.agilent.com) for more information.

---

# Safety Symbols

**Table 7** Safety Symbols

Symbol	Description
	The apparatus is marked with this symbol when the user should refer to the instruction manual in order to protect risk of harm to the operator and to protect the apparatus against damage.
	Indicates dangerous voltages.
	Indicates a protected ground terminal.
	Indicates eye damage may result from directly viewing the light produced by the deuterium lamp used in this product.
	The apparatus is marked with this symbol when hot surfaces are available and the user should not touch it when heated up.

## WARNING

### A WARNING

**alerts you to situations that could cause physical injury or death.**

- Do not proceed beyond a warning until you have fully understood and met the indicated conditions.

## CAUTION

### A CAUTION

**alerts you to situations that could cause loss of data, or damage of equipment.**

- Do not proceed beyond a caution until you have fully understood and met the indicated conditions.

## Operation

Before applying power, comply with the installation section. Additionally the following must be observed.

Do not remove instrument covers when operating. Before the instrument is switched on, all protective earth terminals, extension cords, auto-transformers, and devices connected to it must be connected to a protective earth via a ground socket. Any interruption of the protective earth grounding will cause a potential shock hazard that could result in serious personal injury. Whenever it is likely that the protection has been impaired, the instrument must be made inoperative and be secured against any intended operation.

Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, and so on) are used for replacement. The use of repaired fuses and the short-circuiting of fuse holders must be avoided.

Some adjustments described in the manual, are made with power supplied to the instrument, and protective covers removed. Energy available at many points may, if contacted, result in personal injury.

Any adjustment, maintenance, and repair of the opened instrument under voltage should be avoided whenever possible. When inevitable, this has to be carried out by a skilled person who is aware of the hazard involved. Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present. Do not replace components with power cable connected.

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

Do not install substitute parts or make any unauthorized modification to the instrument.

Capacitors inside the instrument may still be charged, even though the instrument has been disconnected from its source of supply. Dangerous voltages, capable of causing serious personal injury, are present in this instrument. Use extreme caution when handling, testing and adjusting.

When working with solvents, observe appropriate safety procedures (for example, goggles, safety gloves and protective clothing) as described in the material handling and safety data sheet by the solvent vendor, especially when toxic or hazardous solvents are used.

## Safety Standards

This is a Safety Class I instrument (provided with terminal for protective earthing) and has been manufactured and tested according to international safety standards.

## General Safety Information

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Agilent Technologies assumes no liability for the customer's failure to comply with these requirements.

### **WARNING**

**Ensure the proper usage of the equipment.**

**The protection provided by the equipment may be impaired.**

→ The operator of this instrument is advised to use the equipment in a manner as specified in this manual.

---

## Agilent Technologies on Internet

For the latest information on products and services visit our worldwide web site on the Internet at:

<http://www.agilent.com>



G1390-90011

Part Number:  
G1390-90011

Edition: 02/2013  
Printed in Germany

© Agilent Technologies, Inc 2012,  
2013

Agilent Technologies, Inc  
Hewlett-Packard-Strasse 8  
76337 Waldbronn, Germany