


# No Vent Microfluidics: Quick Reference Card

The No Vent™ Microfluidics kit includes the following parts:

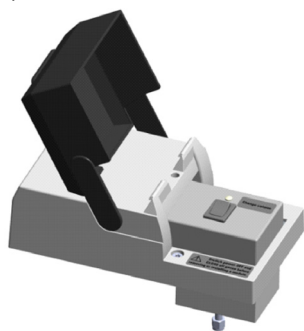

No Vent Microfluidics Module



Mounting Bracket



Pre-measured Deactivated Tubing



No Vent Microfluidics Tee



SilTite™ FingerTite Nut



SilTite FingerTite™ Pre-swage Tool



SilTite FingerTite Ferrule



SilFlow™ Nut



SilFlow FingerTite Pre-swage Tool



SilFlow Pre-swage Tool



SilFlow Ferrule



USB Stick

The **USB stick** contains the instructions on video and electronic printable format for installing the No Vent™ Microfluidics kit on your TRACE 1300/TRACE 1310 GC.

## Launch Installation video tutorial to properly install the No Vent Microfluidics Kit



To launch the video on the PC, insert the USB stick into an USB port on your computer, then select **No Vent installation.mp4**.

To launch the video on the touchscreen of your TRACE 1310, insert the USB stick into the USB port located at the bottom of the touchscreen. Select **Maintenance | Video**, then play **No Vent installation.wmf**. The video display does not affect normal GC operation.

© 2013 Thermo Fisher Scientific Inc. All rights reserved. TRACE 1300 and TRACE 1310 are trademarks of Thermo Fisher Scientific. SilFlow, SilTite, NoVent, and FingerTite are registered trademarks of SGE Analytical Science. All other trademarks are the property of Thermo Fisher Scientific and its subsidiaries.